

Bluetooth Handsfree *User Manual*

Manos Libres con Bluetooth
Manual de Usuario



BT-268



Declaration:

Without written permission from original manufacturer, reproduction, transfer, distribution or storage of part or all of the contents in this document in any form is prohibited.

The company reserves rights to make any changes and improvements to the product described in this document without prior notice.

Notice

Please make sure your mobile phone supports Bluetooth profiles and network operator supports the functions described in this manual, otherwise the relative functions cannot be realized on this Handsfree device.

Safety

- Use the charger coming with the package.
- Check the laws and regulations before using mobile phones and Handsfree equipment in the areas where you drive. Always give full attention to driving and pull off the road and park before making or answering a call if driving conditions require.
- Do not allow children to play with your Bluetooth Handsfree Speaker since it contains small parts that could become detached and create a choking hazard.
- This device contains a Li-Polymer battery. Please keep it away from fire anytime (including discarding the device) or the battery may explode
- The Handsfree Speaker, especially the embedded battery must be properly disposed or may be recycled, contact your local recycling centers for disposal methods.

Certification and Safety Approvals

This product has been tested and found to comply with Bluetooth BQB requirements, part 15 of FCC rules, R&TTE Directive (99/5/EC) or CE marked requirements. Please refer to declaration of Conformity.

Warning: Users should not make changes or modify the device in any way. Changes or modifications without expressly approved by the party responsible for compliance could void the user's authority to operate the device.

This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

FEDERAL COMMUNICATIONS COMMISSION INTERFERENCE STATEMENT

This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna if applicable.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/ TV technician for help.

CAUTION:

Any changes or modifications not expressly approved by the grantee of this device could void the user's authority to operate the equipment.

RF exposure warning:

The equipment complies with FCC RF exposure limits set forth for an uncontrolled environment.

The equipment must not be co-located or operating in conjunction with any other antenna or transmitter.

1. INTRODUCTION	5
1.1 BLUETOOTH TECHNOLOGY.....	5
1.2 PRODUCT FEATURES.....	5
1.3 PACKAGE CONTENTS.....	6
1.4 OVERVIEW.....	6
1.5 DEFINITIONS OF ICON INDICATORS.....	7
2. USING YOUR HANDSFREE	8
2.1 BATTERY CHARGING AND USAGE.....	8
2.1.1 BATTERY CHARGING.....	8
2.1.2 BATTERY INFORMATION.....	8
2.2 MOUNTING THE HANDSFREE.....	8
2.3 TURN ON/OFF HANDSFREE.....	9
2.4 MENU OPERATIONS.....	10
2.4.1 THE MAIN MENU.....	10
2.4.2 ENTER MAIN MENU.....	11
2.4.3 BROWSE MENU ITEMS.....	11
2.4.4 EXECUTE MENU ITEM OR ENTER SUBMENU.....	11
2.4.5 EXIT MENU.....	11
2.5 PAIRING AND CONNECTION.....	11
2.5.1 PAIRING DEVICE WITH BLUETOOTH HANDSET.....	11
2.5.2 DELETE PAIRING RECORDS.....	11
2.5.3 QUIT PAIRING WITH BLUETOOTH EQUIPMENT.....	12
2.5.4 CONNECTING/DISCONNECTING DEVICE WITH BLUETOOTH HANDSET.....	12
2.6 CALL FUNCTIONS.....	12
2.6.1 BASIC CALL OPERATIONS.....	12
2.6.2 ADJUST VOLUME.....	12
2.6.3 MUTE AN ACTIVE CALL.....	12
2.6.4 TRANSFER CALL BETWEEN HANDSFREE AND HANDSET.....	12
2.6.5 VOICE DIALING.....	13
2.6.6 ADVANCED CALL OPERATIONS.....	13
2.7 AV FUNCTIONS.....	13
2.7.1 USING HANDSET AV FUNCTION.....	13
2.7.2 AV OPERATIONS.....	14
2.8 PAIRING/CONNECTING WITH OTHER BLUETOOTH EQUIPMENT.....	14
2.8.1 PAIRING HANDSFREE WITH OTHER BLUETOOTH EQUIPMENT.....	14
2.8.2 CONNECTING YOUR HANDSFREE WITH BLUETOOTH USB DONGLE.....	14
2.8.3 CONNECTING BOTH AV PLAYER AND HANDSET.....	15
3. PHONEBOOK OPERATIONS	16
3.1 DOWNLOAD PHONEBOOK.....	16
3.1.1 INITIATE PHONEBOOK DOWNLOADING/SYNCHRONIZATION FROM HANDSFREE.....	16
3.1.2 INITIATE PHONEBOOK DOWNLOADING/SYNCHRONIZATION FROM HANDSET.....	16
3.2 DELETE PHONEBOOK.....	17
3.3 DISPLAY AND MAKE CALL VIA PHONEBOOK.....	17
4. TWO-LINK OPERATION	18
4.1 CONNECT TWO HANDSETS.....	18
4.2 SETUP PRIMARY DEVICE.....	18
4.3 CALL OPERATIONS.....	19
5. DEVICE CONFIGURATION AND MAINTENANCE	20
5.1 SET BACKLIGHT TIME.....	20
5.2 SET BRIGHTNESS.....	20
5.3 SET LANGUAGE.....	20
6. UPGRADE SOFTWARE	21
7. QUICK USER GUIDE	22
8. IMPORTANT MESSAGES AND FREQUENTLY ASKED QUESTIONS	25
9. MAINTENANCE	26

1. Introduction

1.1 Bluetooth Technology

Bluetooth is an internationally standardized technology supporting short distance wireless communications. Any two Bluetooth-compatible equipments, such as mobile phone, PDA, PC, headset, mouse, keyboard, printer, etc. can wirelessly communicate with each other via a Bluetooth connection. To ensure worldwide compatibility, Bluetooth operates on the globally available ISM (Industrial Scientific and Medical) frequency band. Within 2.4 GHz and 2.48 GHz, Bluetooth transmits data up to either 10 meters (CLASS II mode) or 100 meters (CLASS I mode) using 79 frequency hopping channels.

Though line-of-sight is not required, Bluetooth connections could be subject to interferences from obstructions such as walls, human bodies, and other electronic devices. In addition, due to variations on product implementation, it is likely that Bluetooth equipments from different manufactures have interoperability issues. In that case, you may consult with manufactures to check product compatibility.

Note that, there could be some restrictions imposing on using Bluetooth devices in some countries. Please check with your local authorities.

1.2 Product Features

- Bluetooth v 2.0 compliant, interference-tolerable with WLAN devices
- Class II, operating range up to 10 meters
- An OLED screen displays phone status, battery capacity, call status, caller's ID, and local phonebook records
- User friendly menu design ideal for car drivers to make/receive calls and operate the device
- Support local phonebook, call origination, and phonebook synchronization with mobile phone records
- Support A2DP, AVRCP, HS/HF,OBEX and OPP profiles
- Support software upgrade via USB port
- Data rate up to 723 Kbps
- Compatible with most Bluetooth-enabled devices such as cellular phones, PDAs, computers, MP3, MP4, iPod, and other multimedia players
- Support up to 8 handset pairing information
- Best-in-class voice quality ensured by cutting-edge noise suppression and echo cancellation techniques
- Voice dialing and user friendly operation keys ideal for car drivers to make/receive calls
- Support call waiting and conferencing call functions
- Support advanced features such as simultaneous two-link connections and multi-language display
- Voice security ensured by using 128-bit encryption
- Audio output up to 115 dB
- Better portability with internal rechargeable Lithium Polymer battery
- 3.5mm standardized Line-Out connector for voice privacy
- Low power consumption, up to 6 hours talk time and 550 hours standby time with

- the internal battery
- Easy-to-mount with car Sun-Visor Clip and Vent Mounting Clip
- Robust performance, fast connection, accurate and sensible search of devices in range
- Stylish, portable, lightweight, mini-sized, suitable for vehicle and office environment

1.3 Package Contents

 
- | | |
|--|---|
| ● BT-268 | 1 |
| ● Sun-Visor Clip | 1 |
| ● Vent Mounting Clip | 1 |
| ● Car Charger Set (Travel Charger, Optional) | 1 |
| ● User Manual | 1 |

1.4 Overview





 





 




Figure 1 Overview

1. : Switch the device on/off
2. : Answer/end a call, transfer a call between Handsfree and handset, select menu items, play /pause AV
3. : Volume up, scroll up menu items, last number redial
4. : Volume down, scroll down menu items, voice dialing
5. : Enter/exit menu, mute call, stop AV play
6. : Phonebook display
7. OLED Screen: Displays control menu, phone status, battery capacity, call status, caller's ID, and phonebook records
8. Microphone: Voice pick-up
9. : Earphone jack for connecting external earphone

10. Speaker: Voice/AV music delivery
11. : Charging port for connecting to car (or travel) charger for charging device battery

1.5 Definitions of Icon Indicators

The following icon indicators are used for displaying the device/phone status on the OLED screen:

- “”: Mute indicator, displayed when the device is in the muting status
- “”: SMS indicator, displayed when a new SMS is received (Optional)
- “”: Phonebook synchronization indicator, displayed when phonebook synchronization between the device and the handset is in progress
- “”: Pairing indicator, displayed when entering pairing mode
- “”: Connecting indicator, displayed when connection is in progress
- “”: Connected indicator, displayed after establishing Bluetooth connection
- “”: AV connection indicator, displayed after establishing the connection of AV service
- “”: Battery information indicator, with 5 grades , , , , and , displayed according to battery capacity

2. Using Your Handsfree

2.1 Battery Charging and Usage

2.1.1 Battery Charging

This device contains a rechargeable Li-Polymer battery. First-time charging time is about 4 hours. Later-on recharging time is around 2-3 hours. Detailed charging procedures are as follows:

1. Connect the car charger to the cigarette lighter.
2. Plug the connector of the charger to Handsfree's charging port to start charging. Icon indicator "☐" will blink during charging on the screen. Once the icon turns to "■", it indicates the battery is fully charged and you should disconnect the charger from the Handsfree and the power outlet.

You can also use the removable USB charging cable for charging the Handsfree speaker from your PC.

2.1.2 Battery Information

1. Once fully charged, the battery will support continuous talk time up to 6 hours and standby time about 550 hours.
2. When the battery on low, the device beeps once every 20 seconds and there is "Low Power" display on the screen, charge the battery as described above.

Note that, over-charging will reduce battery life. If a fully charged battery is left unused, it will lose power over time. Extreme temperature (either too hot or too cold) will also affect its ability to charge, capacity, and lifetime.

2.2 Mounting the Handsfree

This Handsfree device can be easily mounted inside the car by either using the companion Sun-Visor Clip to fix the product on the sun-visor over the driver's seat, or inserting the optional Vent Mount Clip onto the vent in front of the driver's seat. As shown in Figures 2 and 3, there are two magnetic tips on the backside of the device. You can attach the Sun-Visor Clip or the Vent Mounting Clip to them. For better mounting the device, please clip the Sun-Visor Clip to the su-visor first, and then properly attach the device to the Sun-Visor Clip. To use the Vent Mounting Clip, you may adjust the clip direction according to your car vent, as shown in Figure 4.

Note that, the microphone of the Handsfree must aim at the sound bearing.

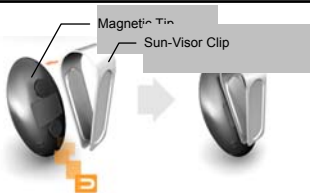


Figure 2 Attach Sun-Visor Clip to Magnetic Tips

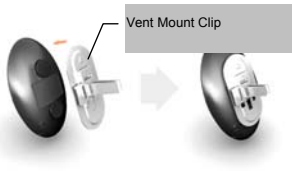


Figure 3 Attach Vent Mounting Clip to Magnetic Tips

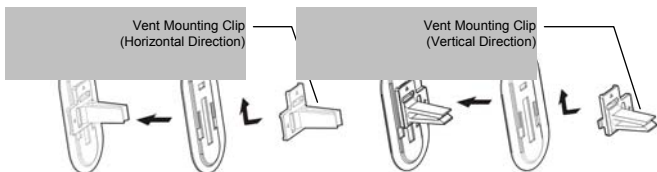


Figure 4 Adjust Vent Mounting Clip Direction (Vertical or Horizontal)

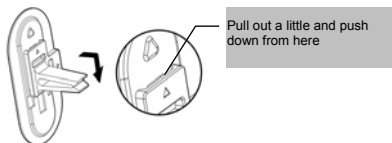


Figure 5 Detach Clip from metal base

With great portability and flexibility, this device can also be used outside the car environment such as in the office and/or at home.

2.3 Turn on/off Handsfree

Turn on the Device: Press and hold the button “☎” for 3 seconds until BT-268 appears on the screen and two power-up tones are heard, this indicates that the Handsfree is now turned on.


Turn off the Device: Press and hold the button “☎” for 3 seconds until the screen is off and two power-down tones are heard, this indicates that the Handsfree is now turned off.

2.4 Menu Operations

2.4.1 The Main Menu




A user friendly control menu is provided for assisting the user to use the product.

Listed below are menu page contents and the usage of each menu item:

- **Enter Pairing Mode:** Selecting this item will let the device enter pairing mode
- **Delete Paired Info:** Selecting this item will delete all the pairing records stored in the device
- **Delete Phonebook:** Selecting this will delete all the phonebook records stored in the device
- **Sync Phonebook:** Selecting this item will synchronize the device local phonebook records with the records stored in the handset. Note that, this menu item is displayed on the screen only if the connection between the handset and the Handsfree is on. And, it only works with compatible handsets.
- **Primary Device:** Selecting this item will let the device display the two links (associated with the device name) currently established. The user can then further select one of them as the primary link. Note that this menu item comes with BT-268 with simultaneous two link capability only. It is displayed on the screen only if the connection between the handset and the Handsfree is on.
- **Backlight Time:** Selecting this item will lead to a second level sub-menu shown below. The user can continue to pick a sub-menu item to adjust screen projection time.
 - 10 Sec
 - 20 Sec
 - 60 Sec
 - Always On
- **Brightness:** Selecting this item will let the user adjust the brightness of displayed fonts and icon indicators following the brightness indication bar showed on the screen.
 - Brightness
- **SW Version:** Selecting this menu will let the user find the 8-digit ("XXXXYYZZ") SW version used by the device, as shown below.
 - SW Version
 - XXXXYYZZ
- **Select Language:** Selecting this item will lead to a second level sub-menu of language options. The user can continue to pick a sub-menu item for language setting.

Press the button "+" or "-" can make page up and page down and to choose one menu item.

2.4.2 Enter Main Menu

Press button  to enter the main menu. Note that, this action is not valid if the device is in the talk/play mode or displaying phonebook records (in this case, the user should press button  to exit from displaying phonebook records and then press button  to enter the main menu).



2.4.3 Browse Menu Items

Press button “+” or “-” to scroll up or down items of main/sub menu. The highlighted item will be ready for being selected by the user.

2.4.4 Execute Menu Item or Enter Sub-menu

Press button  to execute the highlighted menu item or enter a highlighted submenu.

2.4.5 Exit Menu




In the submenu, press button  to return to the main menu. If it is already the main menu, press button  to exit from the menu.


2.5 Pairing and Connection

2.5.1 Pairing Device with Bluetooth Handset


 
Before making and answering calls, you must pair your Handsfree device with your handset. Pairing sets up a unique relationship between the two and let the handset memorize the Handsfree's unique ID (or passkey). This ensures that calls will always be carried over a unique encrypted wireless link.

Detailed operation procedures are as follows:

1. Place your Handsfree device close to your Bluetooth handset, and ensure both the device and the handset are powered on.
2. Press button  to enter the main menu, choose item “Enter Pairing Mode”, and then press button , you will hear 2 tones and see icon indicator  showed on the screen. This indicates the Handsfree device has successfully entered the pairing mode.
3. Following your phone user guide to active Bluetooth device search on the phone side, on your phone screen you will see a list of Bluetooth equipment found by the phone at the end of the searching process.
4. Select this Bluetooth equipment BT-268 from the list and initiate pairing following handset's on-screen prompts. Then enter passkey “0000” and confirm to pair the device with your handset. Once the pairing procedure is completed, you will hear a connecting tone. This indicates that the Handsfree device and the handset are paired.

Note that, the Handsfree will remain in the pairing mode for about 2 minutes. If pairing cannot be finished within 2 minutes, the Handsfree will enter into the standby mode and icon indicator  will disappear. You need to repeat the above steps 2-4 to restart the pairing process.

2.5.2 Delete Pairing Records

This Handsfree can be paired with up to 8 Bluetooth equipments. Press button  to enter the menu, choose item “Delete Paired Info” and then press button  to erase all pairing records stored in the device.

2.5.3 Quit Pairing with Bluetooth Equipment

When the Handsfree is in the pairing mode, press button “□” or “□” will cause the device to quit from the pairing mode to the standby mode. The icon indicator “Ⓜ” will also disappear.

2.5.4 Connecting/Disconnecting Device with Bluetooth Handset

When the Handsfree communicates with Bluetooth equipment with Handsfree Profile, the Bluetooth connection between two equipments should be established in advance. If two Bluetooth equipments have been paired recently, you can simply reconnect them.

Connecting Device with Bluetooth Handset:

If the Handsfree and the handset have been paired, to connect them, you can either quickly press the Handsfree’s button “Ⓜ” to initiate a connection request or follow the handset’s user guide to find the Handsfree and send a connection request from the handset. During connecting, the connecting icon indicator “↔” will be displayed on the screen. After connecting, you will hear a connection successful tone, and icon indicator “↔” will be replaced by icon indicator “Ⓜ”.

Disconnecting Device with Bluetooth Handset:

When connected, you can press and hold button “Ⓜ” for 3 seconds to drop the connection, or you can follow the handset’s manual to remove connection from the handset side.

When disconnection is completed, you will hear a disconnection successful tone and icon indicator “Ⓜ” will disappear.

2.6 Call Functions

2.6.1 Basic Call Operations

Answer Call: Press button “Ⓜ”.

Reject Call: Press and hold button “ ” for 3 seconds.

End Call: Press button “Ⓜ”.

Redial: Press and hold button “ ” for 3 seconds.

Note that, for product model BT-268 with simultaneous two-link feature, the user must setup the primary device before redialing the call. And the redialed operation is only for the primary device in that case. (Please refer to section 5.2 for details)

2.6.2 Adjust Volume

When in the connected or talk/play mode, you can adjust sound volume up or down by pressing button “ ” and “ ”, respectively. After adjustment, the volume indication bar will keep on the screen for 2 more seconds before disappearing.

2.6.3 Mute an Active Call

You can mute or un-mute the Handsfree during a call by pressing button “📶”. Once entering the mute mode, icon indicator “📶” appears on the screen. It will disappear after the device exits from the mute mode.

2.6.4 Transfer Call Between Handsfree and Handset

Press and hold button “Ⓜ” for 3 seconds to transfer an active call from the Handsfree to handset or from the handset to Handsfree.

2.6.5 Voice Dialing




If the connected handset supports voice dialing, you can press and hold button “ ” for 3 seconds to activate voice dialing. Before using voice dialing, you must record voice tags in your handset. Please refer to your handset manual for detailed descriptions on how to set up voice dialing and recording voice tags.

When voice dialing is progress, you can quickly press button “ ” to cancel voice dialing.

Note that, for product model BT-268 with simultaneous two-link capability, you must setup the primary device before activating voice dialing (refer to Section 4.2 for details).

2.6.6 Advanced Call Operations

If you use call waiting/conference call services with your handset, you can active these features following the operations described below:


1. A new call comes in when the existing call is still in progress
 - 1) Press and hold button “ ” for 3 seconds to hold the current call and accept the incoming new call. Repeating this operation can allow you to continuously hold and accept calls.
 - 2) Press button “” to end the current call and accept the incoming new call.
 - 3) Press button “” to keep the current call and reject the new incoming call.
2. When calls are in progress, one is active and the others are on hold:
 - 1) Press and hold button “ ” for 3 seconds to toggle the hold and the active call. If there are more than one held calls, repeating this operation allow you to switch activating/holding calls from one to another.
 - 2) Press button “” to end the active call and accept a held calls. If there are more than one held calls, repeating this operation allow you to go through all the held calls.
 - 3) Press and hold button “ ” for 3 seconds to make conference. Repeating this operation can allow you to continuously add new calls to the conferencing party.

2.7 AV Functions

This product supports AV Mode Functions. When connecting with a Bluetooth-enabled multimedia/music player, the product allows users to enjoy and remotely play stereo music from the player.


2.7.1 Using Handset AV Function

For handset supporting Bluetooth AV profiles, you can establish AV connection between the handset and the device to enjoy music at the device side while the music is played by the handset. Depending on the handset capability, the AV connection could be established automatically when you start playing music.

If the connection is an AV link, icon indicator “” will occur on the screen. If your handset does support Bluetooth AV profiles but you fail to get AV connection when you start playing music, then you must follow your handset’s user guide to establish AV connection before playing music.

 
2.7.2 AV Operations

The following operations can be used for remotely control your Bluetooth AV capable handset or media player to play music:

 

Play: Press button .

Pause: Press button .

Stop: Press button .

Forward: Press and hold button  for 3 seconds.

Backward: Press and hold button  for 3 seconds.

In addition, you can press button  to increase sound volume and button  to decrease sound volume

2.8 Pairing/Connecting with Other Bluetooth Equipment

2.8.1 Pairing Handsfree with Other Bluetooth Equipment

In addition to Bluetooth phones, your Handsfree can also be paired with other Bluetooth equipment for realizing short distance wireless communications. Similar pairing procedures described in Section 2.5.1 can be applied. You can also follow the user guide of the Bluetooth equipment to complete pairing operations on the equipment side.


 

 
This Handsfree can be paired with up to 8 Bluetooth equipments (including mobile handsets). The corresponding 8 sets of pairing information are recorded by the Handsfree. Please check Section 2.5.2 for procedures to delete pairing records.


Each paired equipment can wireless communicated with the Handsfree after setting up Bluetooth connection. Please check Section 2.5.4 for procedures on establishing Bluetooth connection.

2.8.2 Connecting Your Handsfree with Bluetooth USB Dongle

Before pairing and connecting, please ensure your USB dongle has already been connected with PC and the IVT's BlueSoleil driver has been installed in PC.

Detailed operation procedures are as follows:

1. Press button  to enter the main menu. Choose "Enter Pairing Mode" and press button , you will hear 2 tones and see icon indicator  on the screen. This indicates the Handsfree has successfully entered the pairing mode.
2. Start "IVT BlueSoleil". Click "My Bluetooth—>Bluetooth Device Discovery" on the software menu bar to search the Bluetooth device in range.
3. After finding your Handsfree device, right click BT-268, and choose "Pair Device".
4. Enter passkey '0000' and confirm to pair the Handsfree with your computer.
5. After paired, a red  will occur before device name BT-268. Connection for supporting "Bluetooth AV Service" will then be established automatically.
6. For remotely playing and enjoying music from the PC, you can choose to start "Windows Media Player" and configure the speaker interface to be "Bluetooth AV/HIS Audio" after establishing AV service connection.


7. After reconfiguration, restart "Windows Media Player". You can now listen to the music at the Handsfree side. You can also use the Handsfree to remotely control music playing on the PC, as detailed in Section 2.7.2.
8. For voice communications such as chatting over the Internet, you must disconnect "Bluetooth AV Service", and connect "Bluetooth Headset Service". First, right click BT-268 and choose "Disconnect—>Bluetooth AV Service".
9. Then, right click BT-268 and choose "Connect—>Bluetooth Headset Service". Once you hear indicating tones from the Handsfree, press button  to make the connection.
10. After setting up the connection, from the "Control Panel" you start "Volume and Audio Device" and configure the default device to be "Bluetooth AV/HS Audio". Now you can use Handsfree's microphone to conduct voice communications.

Note that, when connecting with "Bluetooth AV Service", you can use Handsfree's buttons to control the remote device, such as "play", "pause", select music, and control Volume up and down. But, you can't use the microphone at the Handsfree side for voice communications. On the other hand, when connecting with "Bluetooth Headset Service", you can listen to the music and use Handsfree's microphone; however, you can't use the Handsfree to control the remote device. If you use Bluetooth windows driver other than IVT's BlueSoleil, you may follow software vendor's user manual to complete pairing and connecting your Handsfree with your USB dongle.

2.8.3 Connecting Both AV player and Handset

This product can connect with an AV player and a Bluetooth handset at the same time. This allows you to receive and make phone calls while listening to music

Detailed operation procedures are as follows:

1. Pair your handset with the Handsfree (see Section 2.5 for details) to ensure that the Handsfree has stored the pairing information of the handset. If the handset has paired with the Handsfree, you can skip this process. If the handset automatically establishes connection with the Handsfree at the end of pairing, you need press and hold button  for 3 seconds to drop the connection.
2. Pair and connect the Handsfree with your AV player (see Sections 2.7.1 and 2.7.2 for details) to enable AV mode functions.
3. Follow handset's manual to initiate the connection from the handset side (see Section 2.5.3 for details).




While listening to music, the product will notify the user an incoming call. You can pause the on-playing music to accept the incoming call or reject the call following the same button operations specified in Section 2.6.1. After ending the call, the music playing will be turned back on automatically. If you want to make a phone call while listening to music, you can either dial a number from phonebook or via voice dialing, the handset will also mute the music accordingly.

3. Phonebook Operations

3.1 Download Phonebook

3.1.1 Initiate Phonebook Downloading/Synchronization from Handsfree

You may download or synchronize phonebook by initiating the process from the Handsfree side. The procedures are as follows:

Press button  to enter the main menu, choose item 'Sync Phonebook', and then press button ; the Handsfree starts to download phonebook records from the handset. If there are no handset compatibility issues, the downloading process will replace the existing phonebook stored in the Handsfree with the new one. Icon indicator  will appear on the screen until the end of the downloading process. If the Handsfree does not have enough space to record all the phonebook records, the downloading process will be terminated after running out of space and message 'Phonebook Full!' will occur on the screen. The Handsfree will keep phonebook information recorded before termination time.

 
If there are handset compatibility issues, the downloading process will be terminated immediately and message 'Sync Failed! Unsupported Phone' will occur on the screen.

The old phonebook records will remain in the Handsfree.

Note that, you may try to send phonebook records one by one to the Handsfree from the handset if you failed to initiate phonebook downloading from the Handsfree side.

3.1.2 Initiate Phonebook Downloading/Synchronization from Handset

Referring to your handset's user manual, you may also initiate phonebook downloading and synchronization from the handset. Note that, you need to ensure that the device is in the standby mode without Bluetooth connection with the handset before downloading.

While downloading, icon indicator  will be displayed on the screen until either finishing downloading all the records or running out of Handsfree's memory space. If there are compatibility issues, your handset may display error messages (check your handset for details).

Note that, phonebook downloading/synchronization may be different for different handsets. Listed below are some examples (only a small number of phones are listed here):



Model	Send One by One	Send All
Sony Ericsson W800	Yes	Yes
Sony Ericsson K750	Yes	Yes
Sony Ericsson K700c	Yes	Yes
SAMSUNG D608	Yes	Yes
SAMSUNG D508	Yes	No
NOKIA 6600	Yes	No
NOKIA N-Gage QD	Yes	No

Moto E680	Yes	No
-----------	-----	----

Note that,

 
1. Depending on phone models, you can download phone numbers from those recorded in the phone, in the SIM card, or both. For instance, SAMSUNG D508 and D608 allow you to synchronize numbers recorded in the handset and the SIM card.
2. Some handsets, such as W800, K750, D608, offer multiple choices of establishing different Bluetooth connections. You need to follow handset user guide to establish the correct connection from the handset side before synchronization phonebooks.

 


3.2 Delete Phonebook

Press button  to enter the main menu, choose item 'Delete Phonebook, and then press button  to delete all the phonebook records.


Note that, for the product with Two-link version, it must setup the primary device first before deleting the phonebook, since this operation is only valid for the primary device. (See Section 4.2 for details)

3.3 Display and Make Call via Phonebook

In standby or connected mode, press button  to display phonebook. If there is no records, message 'Phonebook is Empty!' will be displayed. Otherwise, the first phone number record will show. Typically, both the call party's name and the phone number will be shown on the screen. However, if there are any characters (such as from the language different from the currently language used) not recognized, symbol "?" may appear on the screen. If you didn't enter name associate with the phone number recorded in your handset, you may only see the phone number displayed. In addition, depending on whether the phone number is associate with caller party's "Work", "Home", and "Mobile" phone number recorded in the phonebook, you may see the caller party's name string follows by characters "/w", "/h", "/m", respectively.

You can press button  or  to browse phone numbers. After picking up a number, press button  to make call.

Note that, your Handsfree may contain phonebook records downloaded from more than one handsets.

1. For product model without supporting two-link feature, if the Handsfree is in the standby (without connection) mode, pressing button  will display latest downloaded records (from the last handset). If the Handsfree is in the connected mode, records associated with the connected handset will be displayed.
2. For product model BT-268 with two-link version capability, you must connect to the primary device before displaying phonebook records and make call (see Section 4.2 for details).

4. Two-Link Operation


This feature is only for Handsfree model BT-268. Compared to a regular Bluetooth Handsfree device in the market which can only connect to a single handset at a time, this feature allows you to connect two paired handsets simultaneously. Thus, if there is an incoming call from whichever the connected handset, you can take the call following the normal operation instructions specified in this manual. This is very convenient for users with two handsets.

Note that,

1. *When connecting to two handsets, you need to assign one handset to be a primary device following the Handsfree menu. You can only make or change primary device setting from the Handsfree side.*
2. *Unless you change primary device setting, any operations initiated from the Handsfree side will only be applied to the handset set as the primary device.*
3. *Any operations initiated from both the handsets shall be applied to the Handsfree as normal.*
4. *All the regular call handling functions listed in this manual applied except for using call waiting and conferencing for calls received by calls between two connected handsets. If there are two calls received by connected handsets, you can only take the first arrival calls from one handset.*

4.1 Connect Two Handsets


To connect two paired handsets, you can:

1. Following your handset manuals, initiate Bluetooth connection from your handsets one by one. Note that you have to wait for one connection process to be completed before launching another.
2. Press button “



4.2 Setup Primary Device

All operations specified in this manual initiated from the Handsfree side can only be applied to the primary device (or handset). This includes all call functions and phonebook operations.

To setup a primary device, you can

1. After setting connection(s), press button “

18

2. Use button “ ” or “ ” to pick a connected handset, press button “” to set it to be the primary device
3. Press button “” to quit setting or return to the previous menu

Note that, once the primary device is set, you can only see the phonebook records associated with the primary device.



4.3 Call Operations

When two handsets are both connected to the Handsfree:




1. If there is only one call received by a handset, the call will be passed to the Handsfree and all call operations will be the same as the case with single connection.
2. If two calls received from both connected Handsfree, only the first call associate with one handset will be passed to and controlled by the Handsfree. Unless the first call is terminated, the second call associated with another handset will stay on that handset and can not be controlled by the Handsfree.
3. Call waiting and conferencing are not applicable to two calls received by two connected handsets respectively.

5. Device Configuration and Maintenance



5.1 Set Backlight Time


Press button  to enter the menu, choose item 'Backlight Time', and then press button  to enter the following submenu shown below:





- 10 Sec
- 20 Sec
- 60 Sec
- Always On

Use button " " or " " to highlight the backlight time that you want to pick, and then press the  button to set the time (See Section 2.4 for other related operations). *Note that, shorter backlight time will lead to longer battery life.*



 
 

5.2 Set Brightness

Press button  to enter the menu, choose item 'Brightness' and then press button  to get the brightness control bar shown below:

- Brightness 

Use button " " or " " to choose the right brightness that fit to your application environment, and then press either button  or . To activate it.

5.3 Set Language



 
 


Press button  to enter the menu, choose item 'Language' and then press button  to enter the submenu containing list of language options. You can use button " " or " " to highlight the desired language and press the button  to activate it.

Note that, depending on the product model and software version used, you Handsfree may only support single language such as English.

6. Upgrade Software

This device supports self software upgrade via USB port. This unique feature allows you to always get the latest software release from the downloads section of website "www.BluAce.com". Such software upgrade may help you to resolve some compatibility issues related to new handset models entering the market. Our upgrade software may also include product feature and performance improvement which you may want.

Detailed operation procedures are as follows:

1. Download software upgrade tool 'F- DFU Wizard' from our website and install it in your PC.
2. Download USB driver and the latest version of software of the product model that you have from our website.
3. Connect the Handsfree with PC using the USB cable coming with the package.
4. Press button " " to enter the menu, choose item 'SW_Version', and then press buttons "  ", " ", " ", and " " one by one to enter the software upgrade mode. Message 'DFU...' will be displayed on the screen.
5. If you decide to stop the upgrade process, press button " " twice to exit the software upgrade mode. Otherwise, continue to install the downloaded USB driver in your PC,
6. Continue to update the software by executing tool 'F- DFU Wizard'.

Warning:

Interrupting the upgrade process, such as lost of power, USB cable disconnection may cause your Handsfree unrecoverable software errors. You may have to return the product to the vendor for software recovery. Before upgrading your device software, please ensure that your device has enough battery power, the USB cable has been firmly connected to both your PC and your device, and the software execution on your PC will not be interrupted.

7. Quick User Guide

You can follow the instructions listed in Table 1-7 below to operate your Handsfree device (see Sections 1.4 and 1.5 for button definitions and usages.).

Note: your Handsfree device can only talk to paired Bluetooth handsets. For handsets supporting HFP only, you also need to establish Bluetooth connection between your Handsfree and your handset before making and answering calls.

Table 1: Power on/off

FUNCTION	CURRENT STATUS		OPERATION	HANDSFREE INDICATOR	
	HANDSET	HF		AUDIO TONE	OLED INDICATOR
Turn On		Power Off	Press and hold button "⏻" for 3 seconds	Two power-up tones	Display BT-268 on the screen
Turn Off		Standby	Press and hold button "⏻" for 3 seconds	Two power-down tones	The screen is off

Table 2: Pairing/Connections



 







 



FUNCTION	CURRENT STATUS		OPERATION	HANDSFREE INDICATOR	
	HANDSET	HF		AUDIO TONE	OLED INDICATOR
Enter pairing mode		Standby	Press button  to enter the menu, choose item "Enter Pairing Mode" and press button 	Two tones	Display icon indicator "  on the screen
Quit pairing mode		Pairing mode	Press button  or 		Icon indicator "  disappears
Delete all paired info		Standby	Press button  to enter the menu, choose item 'Delete Paired Info' and then press button 		
Pair Handsfree with handset	Power on	Pairing mode	Follow your handset user guide to complete pairing procedure. Passkey is "0000"		Display icon indicator "  on the screen
Connect (Handsfree with handset)	Standby (disconnected)	Standby (disconnected)	Press button  or set up connection from the handset	Two tones	During connecting, icon indicator "  occurs on the screen. Once connected, icon indicator "  appears to replace icon indicator "  .
Disconnect	Standby (connect)	Standby (connect)	Press and hold button "⏻" for 3 seconds or follow handset's manual to initiate disconnection from handset		Icon indicator "  disappears

Table 3: Call Functions


 

 
 

 





FUNCTION	CURRENT STATUS		OPERATION	HANDSFREE INDICATOR	
	HANDSET	HF		AUDIO TONE	OLED INDICATOR
Answer Call	Standby	Standby	Press button " 	Key Tone	
Reject Call	Standby	Standby	Press and hold button " 	Key Tone	
End Call	Talk	Talk	Press button " 	Key Tone	
Redial	Standby	Standby	Press and hold button " 	Key Tone	
Voice Dialing	Standby	Standby	Press and hold button " 	Key Tone	
Cancel Voice Dialing	Voice Dialing	Voice Dialing	Press button " 	Key Tone	
Volume up	Talk	Talk	Press button " 		Display current volume for 2 seconds.
Volume down	Talk	Talk	Press button " 		Display current volume for 2 seconds.
Mute	Talk	Talk	Press button " 	Key Tone	Display icon indicator " 
Un-mute	Talk	Mute	Press button " 	Key Tone	Icon indicator " 

Table 4: Call Transfer Functions

 

FUNCTION	CURRENT STATUS		OPERATION	HANDSFREE INDICATOR	
	HANDSET	HF		AUDIO TONE	OLED INDICATOR
Call Transfer (Handsfree to handset)	Talk	Talk	Press and hold button " 	Key Tone	
Call Transfer (handset to Handsfree)	Talk	Talk	Press button " 	Key Tone	

Table 5: Low Power Indication

FUNCTION	CURRENT STATUS		OPERATION	HANDSFREE INDICATOR	
	HANDSET	HF		AUDIO TONE	OLED INDICATOR
Low Power Warning		Except power off		Beep every 20 seconds	Display Low Power on the screen

Table 6: Advanced Call Functions

FUNCTION	CURRENT STATUS		OPERATION	HANDSFREE INDICATOR	
	HANDSET	HF		AUDIO TONE	OLED INDICATOR
Hold Active Call and Accept Incoming Call	Talk	Call Waiting	Press and hold button "□" for 3 seconds		
End Active Call and Answer New Call	Talk	Call Waiting	Press button "☎"		
Reject the New Call	Talk	Call On Hold	Press button "⏸"		
Toggle Held Call and Active Call	Talk	Call On Hold	Press and hold button "□" for 3 seconds		
End Active Call and Accept Held Call	Talk	Call On Hold	Press button "☎"		
Conference	Talk	Call On Hold	Press and hold button "□" for 3 seconds		

Table 7: Work in with IVT and Windows Media Player

FUNCTION	CURRENT STATUS		OPERATION	HANDSFREE INDICATOR	
	PC	HF		AUDIO TONE	OLED INDICATOR
Play	IVT/Media player on		Press button "☎"		
Pause	IVT/Media player on		Press button "☎"		
Stop	IVT/Media player on		Press button "⏹"		
Volume up	IVT/Media player on		Press button "□"		
Volume down	IVT/Media player on		Press button "□"		
Forward	IVT/Media player on		Press and hold button "□" for 3 seconds		
Backward	IVT/Media player on		Press and hold button "□" for 3 seconds		

8. Important Messages and Frequently Asked Questions

1. 'Low Power' message displayed on the screen:

When this message occurs; please recharge your battery as soon as possible.

2. Can't power up the device after charging more than 20 minutes:

For the first time, the device should be charged at least 40 minute prior to turning it on, it is recommended that the battery should be fully charged before using the device.

3. Can't hear anything from the Handsfree:

You should check the followings:

- Handsfree is power on
- Handsfree has paired with a handset
- Handsfree has connected with a handset (except that the handset supports Headset Profile only)
- Handsfree and handset are within 10 m working distance
- Handsfree and handset has good signal strength

4. Handsfree can not be found when a handset tries to pair with it:

Your Handsfree may not be in the pairing mode, please refer section 2.5.1 for details.

5. Does the paired Handsfree or the paired handset need to be repaired after power off:

No. Please note that for the handset supports Handsfree profile, the Handsfree and the handset must be connected first. Refer section 2.5.4 for details.

6. Voice dialing does not work:

Check whether or not your handset supports voice dialing function and then make sure you have recorded the voice tag. Please note that noisy environment may affect voice dialing.

9. Maintenance

BT-268 is a well-designed communications device. Careful maintenance and proper use will extend the product life and keep its performance. The maintenance procedures recommended below may be helpful to you :

- Always turn off power and keep your device in a safe place when it is not in use.
- Keep the device dry, away from water, precipitation, humidity, moisture, and various liquids that may corrode electronic circuits. If your device gets wet, turn it off immediately and wait until the device gets dry completely before using it.
- Keep the device away from dusty and dirty places. Otherwise, the mechanic and electronic parts could be damaged.
- Do not store the device in high temperatures (above 85 °C or 185°F) or in direct sunlight. Extreme high temperature could degrade performance, reduce battery lifetime, and warp or melt certain plastics.
- Do not store the device in too cold place (under -40 °C or 40°F). Moisture could form inside the device when you take it to a warm place. This could damage the internal electronic circuits.
- Avoid dropping, knocking, and shaking the device. The mechanical parts and the internal electronic circuits could be broken.
- Avoid using harsh chemicals, cleaning solvents, and any other strong detergent to clean the device. You may use a clean and slightly damp cloth to clean the device.
- Always take the device to the nearest authorized service facility for repairing if it is malfunctioning. Disassembling, modifying, and replacing components yourself could degrade product performance, cause damages, and terminate warranty.

